

# INSTALLATION INSTRUCTIONS

## FUEL ACCESS COVER

### 89-05 MAZDA MX-5



Document: 19-0333

Support: info@radiumauto.com

### CAUTION

Only a qualified technician following applicable safety procedures should perform the installation of this product. One must have knowledge in repair and modification of fuel systems and general vehicle modifications to install this product.

**Gasoline and other fuels are flammable and can be explosive.**

Only install in a well-ventilated location to minimize buildup of fuel vapors.

No sparks, open flames, smoking or other ignition sources are to be present. Draining and removal of all fuel from the fuel system is recommended. Proper eye and personal protection is required at all times during installation.

### WARNING

The fuel system is under pressure! Do not loosen any connections until relieving the fuel system pressure.

Consult a service manual for instructions on relieving fuel pressure safely. This product is designed for off-highway and racing use only.

Fuel system components may not be legal for sale or use on emissions controlled motor vehicles. Consult local, state, and federal laws.

STEP	TOOLS NEEDED	INSTRUCTIONS	PHOTO
1		<p>NOTE: The 89-97 MX-5 (NA) and 99-05 MX-5 (NB) are very similar. These instructions cover both fuel access cover variations.</p> <p>The terms "driver-side" and "passenger-side" will NOT be referenced. As depicted, these instructions will always reference "LH" and "RH" areas of the vehicle.</p>	
2	Pry Tool	<p>The OEM fuel access cover is located underneath the rear parcel shelf.</p> <p>As shown, carefully remove the 5 plastic carpet retainers using a pry tool. From the front, lift up and tightly roll the carpet towards the rear to expose the fuel pump access cover.</p>	
3	Screwdriver	<p>Remove the OEM fuel access cover.</p> <p>NOTE: A 89-97 MX-5 (NA) is shown.</p>	
4		<p>The provided adhesive foam will need to be installed and routed exactly like the OEM fuel access cover foam.</p> <p>NOTE: The 99-05 MX-5 (NB) access cover is shown.</p>	

5		Peel back the foam backing.	
6	Scissors	Run the adhesive foam around the perimeter of the access cover mimicking the OEM access cover foam. Cut to length.  NOTE: Because the LH side area is so tight, the adhesive foam will route right over the top of the grommet, as shown.	
7	Screwdriver	Use the provided screws to secure the access cover.	
8		Be sure the foam is compressed evenly. However, be careful not to over torque the screws.  Reinstall all components in reverse order.  <b>INSTALLATION COMPLETE</b>	