



# INSTALLATION INSTRUCTIONS

## FUEL PUMP ACCESS COVER

08-14 SUBARU (Steps 1-10)  
15-21 SUBARU (Steps 9-16)

Document: 19-0269

**Support:** [info@radiumauto.com](mailto:info@radiumauto.com)

## CAUTION

Only a qualified technician following applicable safety procedures should perform the installation of this product. One must have knowledge in repair and modification of fuel systems and general vehicle modifications to install this product.

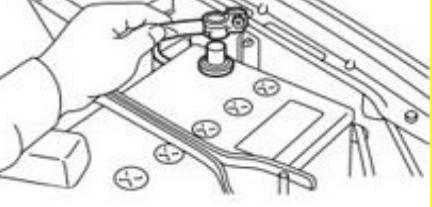
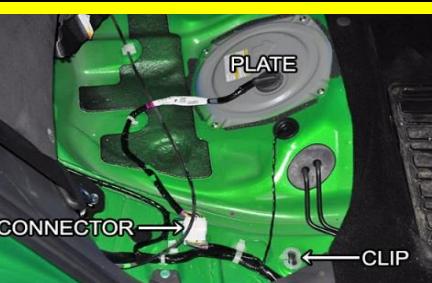
**Gasoline and other fuels are flammable and can be explosive.**

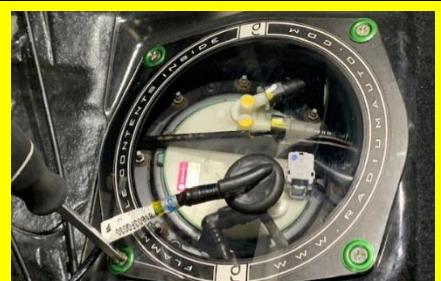
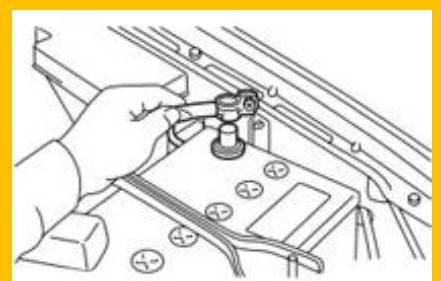
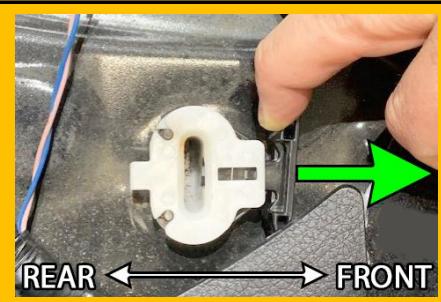
Only install in a well-ventilated location to minimize buildup of fuel vapors.

Only install in a well ventilated location to minimize buildup of fuel vapors.  
No sparks, open flames, smoking or other ignition sources are to be present. Draining and removal of all fuel from the fuel system is recommended.  
Proper eye and personal protection is required at all times during installation.

## WARNING

The fuel system is under pressure! Do not loosen any connections until relieving the fuel system pressure. Consult a service manual for instructions on relieving fuel pressure safely. This product is designed for off-highway and racing use only. Fuel system components may not be legal for sale or use on emissions controlled motor vehicles. Consult local, state, and federal laws.

STEP	TOOLS NEEDED	INSTRUCTIONS	PHOTO
1	10mm Socket Wrench	2008-2014 SUBARU ONLY  Open the hood and disconnect the battery's negative terminal.	
		CAUTION: Disconnecting the battery may cancel fault memories of some control units. Consequently, before disconnecting the battery, always cross examine any fault memories.	
2		2008-2014 SUBARU ONLY  The rear bench is held in by 3 clips. The RH side receiver clip is shown. To unlock, pull the LH and RH clip levers forward one by one (as shown).  Next, find the center point of the seat, reach underneath and pull straight up.	
3		2008-2014 SUBARU ONLY  After removing the seat from the vehicle, note the 3 areas depicted.	
4	Flathead Screwdriver	2008-2014 SUBARU ONLY  Disconnect the white 12-pin wiring harness connector.  There is a white electrical stay located between the white 12-pin connector and the access plate (shown). Carefully pry up to release.	

5	Phillips Screwdriver	<p><b>2008-2014 SUBARU ONLY</b></p> <p>Unscrew the 4 fuel pump access plate screws.</p> <p>Push the rubber grommet through the OEM fuel tank access cover.</p> <p>Unplug the electrical connector from the fuel hat.</p> <p>The OEM access cover, foam, and 4 screws will not be reused.</p>	
6	Scissors	<p><b>2008-2014 SUBARU ONLY</b></p> <p>Install the provided adhesive foam around the perimeter of the hole. As shown, cut to length. For best results, lineup the start and end pieces of the foam to form a perfect seal.</p>	
7		<p><b>2008-2014 SUBARU ONLY</b></p> <p>There are 2 ways the wires can be fed to the fuel pump.</p> <p><b>Option 1</b> - Reusing the OEM rubber grommet in the circular cutout like factory. <b>NOTE: Do NOT apply excessive force and risk damaging the clear cover. Install Time: 1 min.</b></p> <p><b>Option 2</b> - Passing wires through the trunk floor sheet metal grommet (shown). Apply the included clear stickers to each side of the access cover cutout hole. <b>Install Time: 20 min.</b></p>	
8	Phillips Screwdriver	<p><b>2008-2014 SUBARU ONLY</b></p> <p>Using the provided countersink screws, secure the access panel.</p> <p>Reconnect the battery.</p> <p><b>INSTALLATION COMPLETE</b></p> <p><i>NOTE: The included clear stickers will not be used if the OEM rubber grommet is reused as shown.</i></p>	
9	10mm Socket Wrench	<p><b>2015-2021 SUBARU ONLY</b></p> <p>Open the hood and disconnect the battery's negative terminal.</p> <p><b>CAUTION: Disconnecting the battery may cancel fault memories of some control units. Consequently, before disconnecting the battery, always cross examine any fault memories.</b></p>	
10		<p><b>2015-2021 SUBARU ONLY</b></p> <p>The rear bench is held in by 3 clips. The RH side receiver clip is shown. To unlock, pull the LH and RH clip levers forward one by one (as shown).</p> <p>Next, find the center point of the seat, reach underneath and pull straight up.</p>	

11		<p><b>2015-2021 SUBARU ONLY</b></p> <p>After removing the seat from the vehicle, note the 3 areas depicted.</p>	
12	10mm Socket Wrench	<p><b>2015-2021 SUBARU ONLY</b></p> <p>Disconnect the wire loom stay.</p>	
13	Phillips Screwdriver	<p><b>2015-2021 SUBARU ONLY</b></p> <p>Unscrew the 4 fuel pump access plate screws.</p> <p>Push the rubber grommet through the OEM fuel tank access cover.</p> <p>Unplug the electrical connector from the fuel hat.</p> <p>The OEM access cover, foam, and 4 screws will not be reused.</p>	
14	Scissors	<p><b>2015-2021 SUBARU ONLY</b></p> <p>Install the provided adhesive foam around the perimeter of the hole. As shown, cut to length. For best results, lineup the start and end pieces of the foam to form a perfect seal.</p>	
15		<p><b>2015-2021 SUBARU ONLY</b></p> <p>There are 2 ways the wires can be fed to the fuel pump.</p> <p><b>Option 1</b> - Reusing the OEM rubber grommet in the circular cutout like factory. <b>NOTE: Do NOT apply excessive force and risk damaging the clear cover. Install Time: 1 min.</b></p> <p><b>Option 2</b> - Passing wires through the trunk floor sheet metal grommet (shown). Apply the included clear stickers to each side of the access cover cutout hole. <b>Install Time: 20 min.</b></p>	
16	Phillips Screwdriver	<p><b>2015-2021 SUBARU ONLY</b></p> <p>Using the provided countersink screws, secure the access panel. Reconnect the battery.</p> <p><b>INSTALLATION COMPLETE</b></p> <p><i>NOTE: The included clear stickers will not be used if the OEM rubber grommet is reused as shown.</i></p>	