



INSTALLATION INSTRUCTIONS

FUEL FILTER MOUNT

FR-S, BRZ, GT86, GR86

Support: info@radiumauto.com


Document# 19-0468

WARNING: DO NOT EXPOSE WORK AREA TO ANY SPARKS OR FIRE. DO NOT SMOKE WHILE WORKING ON THE FUEL SYSTEM. CLEAN UP ALL FUEL SPILLS IMMEDIATELY. WORK IN A WELL-VENTILATED AREA.

1. As shown, this kit does NOT include a fuel filter, adapter fittings, fuel hose, etc. These can be found at www.radiumauto.com.



2. First, safely raise the vehicle. Remove the 2 large underbody panels shown.

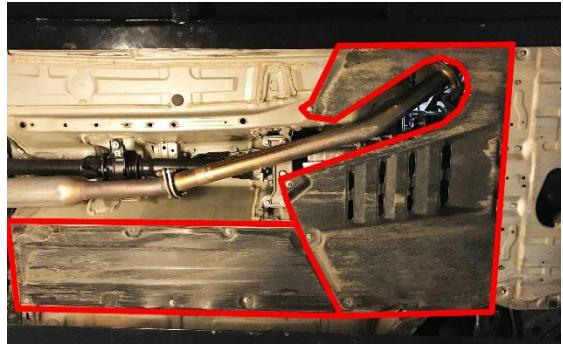

3. Find the mounting bracket and three M8X1.25mm button head screws in the kit. Using a 5mm Allen hex wrench, secure the bracket to LH tunnel over the hard lines near the transmission.



4. Using light oil, lubricate the O-rings on the two 10AN ORB fittings. Secure the fittings to the fuel filter ports using a non-marring wrench.

Now slide the fuel filter into the heat exchanger. Using a 4mm Allen hex wrench, secure the heat exchanger to the filter using the M5 flat head screws.



5. Secure the fuel filter heat exchanger section of the assembly to the mounting bracket using the four included M6 socket head bolts. Tighten using a 5mm Allen hex wrench.

If necessary, move the filter housing around for best fitment.



6. This picture is shown with hoses (not included) connected to the fuel filter.

NOTE: Always position hoses away from hot and/or tight areas to prevent chaffing.

INSTALLATION COMPLETE

